


Tools Required




76mm POST EXTENSION

Assembling & Mounting


1. Remove Post caps / Finials from the top of the Existing 76mm post

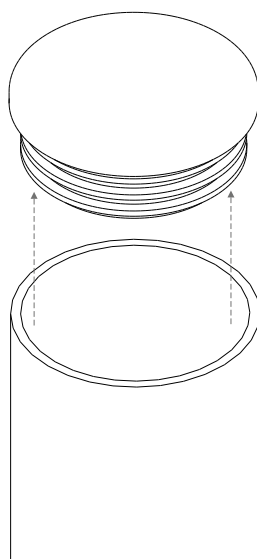

2. Slot the 76mm Post Extension into the top of the existing 76mm post and tighten the Grub screw to clamp the extension into place..

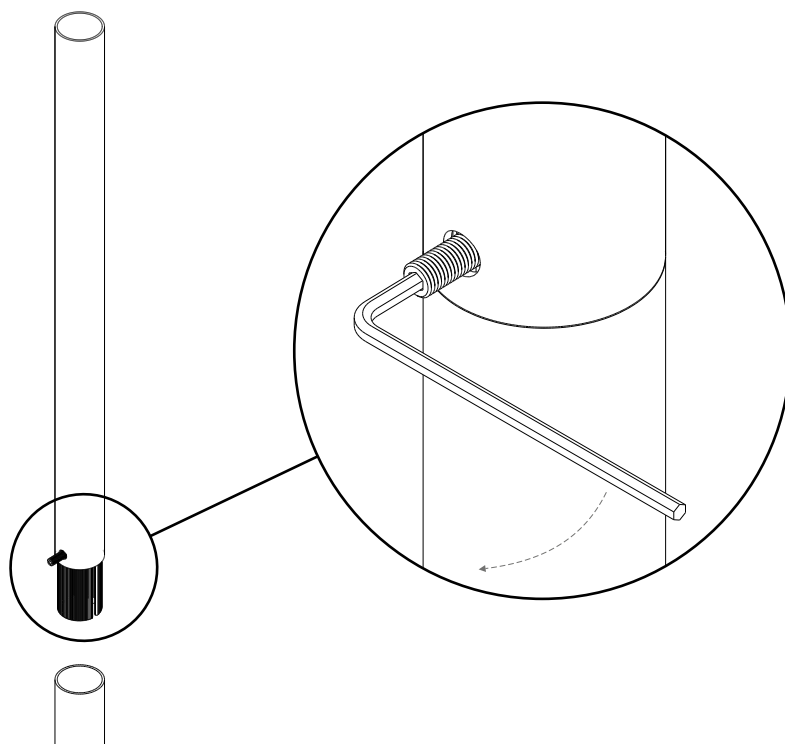

3. Insert Cap into top of the post extension.

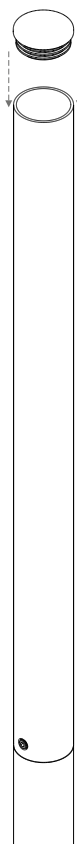

4. Now you can install your signage onto the 76mm posts (see Post Mounted Panel (Single Sided) Assembly Guide for Installation guide).

