


**Tools Required**




# SIGN PANEL WITH FENCE FIXING PLATES

## Assembling & Mounting


1. Slide the M8 Square Head Bolts into the Clip Extrusion on the rear of the Sign Panel.

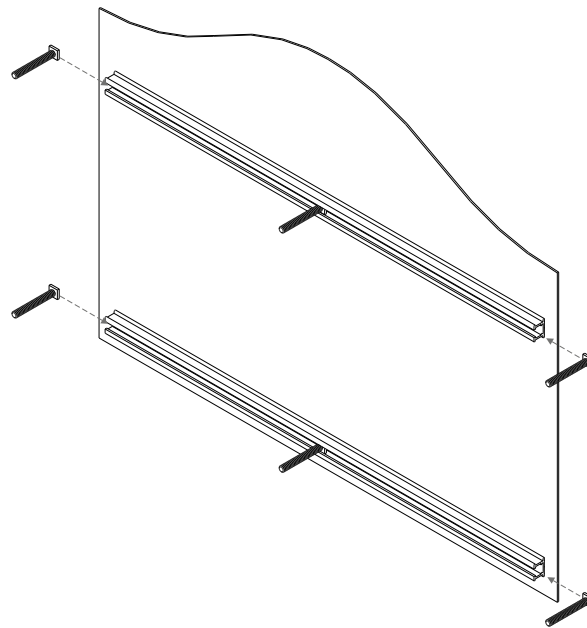

2. Place the Back of the Sign Panel against the fence (Use a Spirit Level to make sure sign is level).

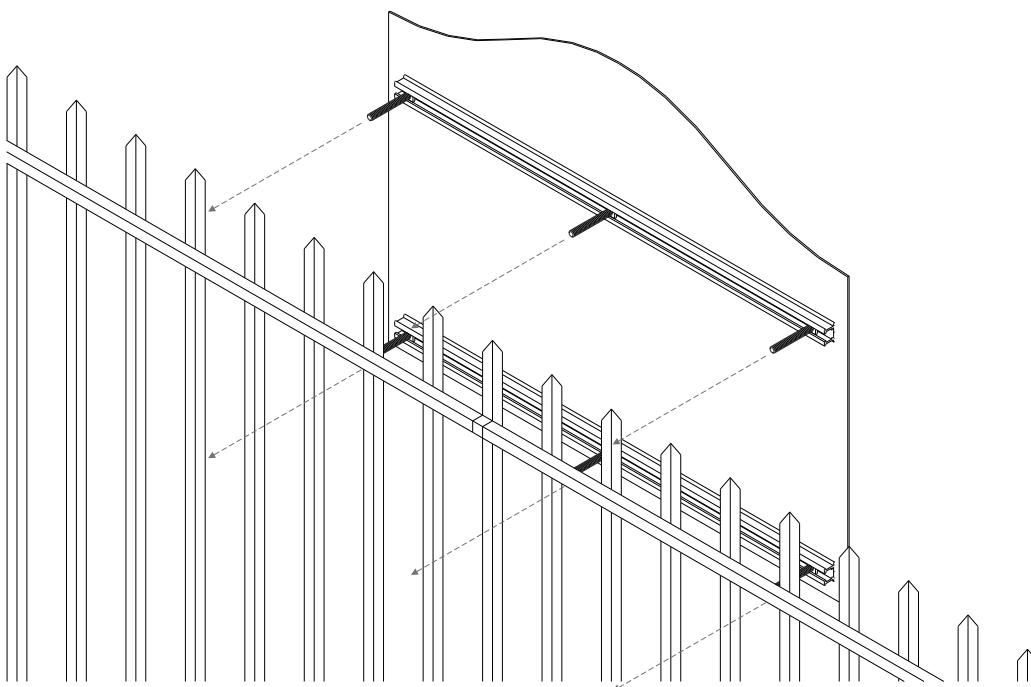

**3. Slot the Fence Fixing Plates over the M8 Bolts that will be protruding through the back of the fence and tighten into place using washers and M8 Nuts which will clamp the signage into place.**

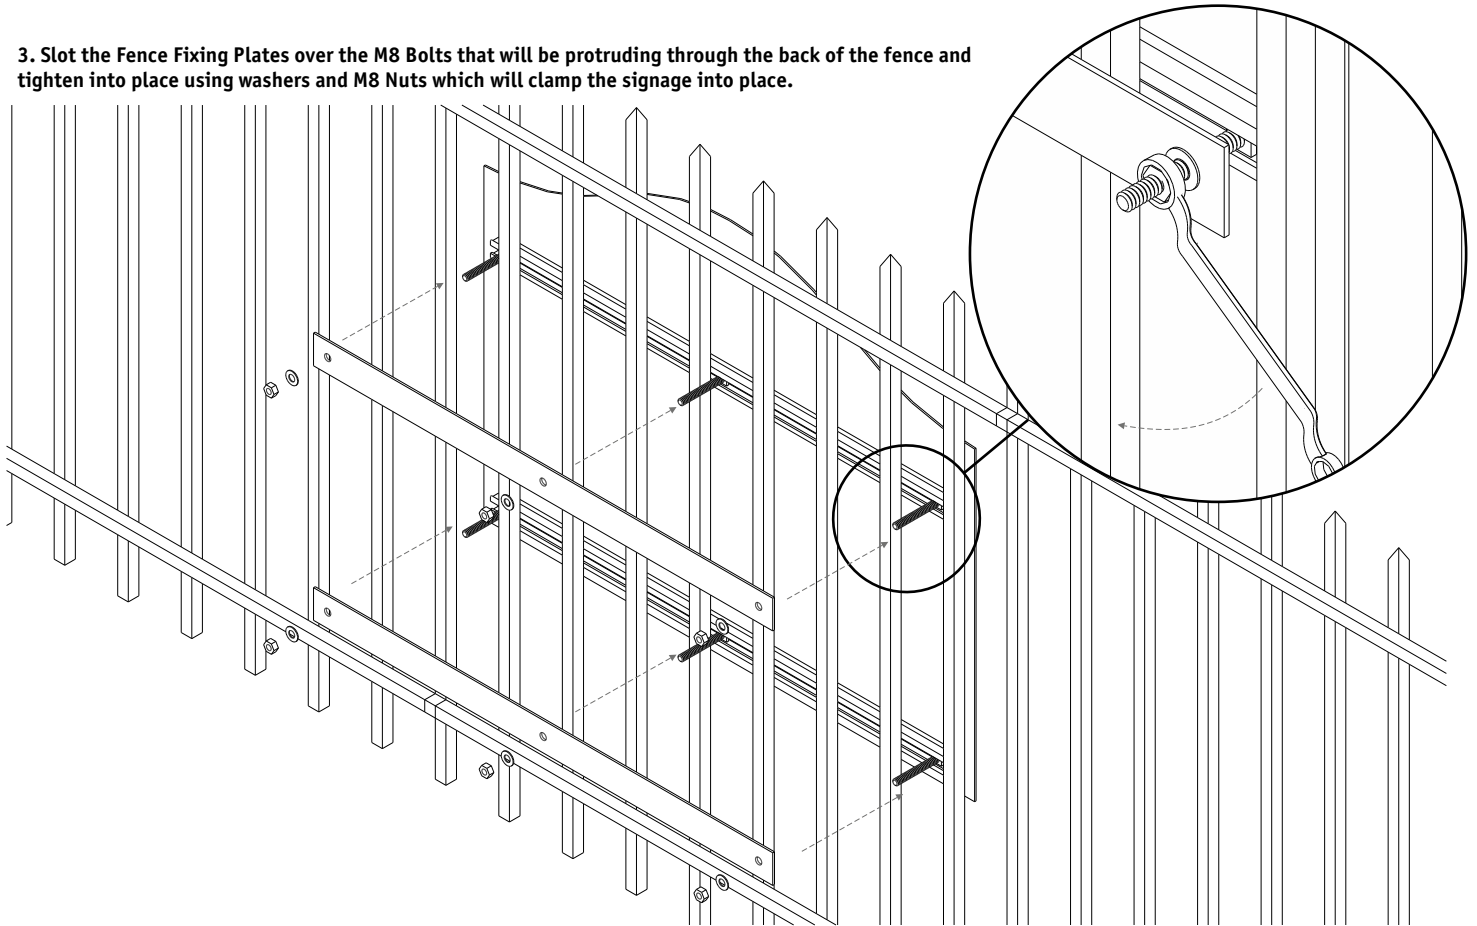

**4. Your Fence mounted panel is now complete.**

